

*** Please see reverse side for step by step instructions.**
*** Please consultez le verso pour des instructions détaillées.**

Screw location for vertical mounting
Position de la vis pour montage vertical

Screw location for horizontal mounting
Position de la vis pour montage horizontal


polkaudio

Center Point
Point Central

OWM3

Screw location for horizontal mounting
Position de la vis pour montage horizontal

Screw location for vertical mounting
Position de la vis pour montage vertical

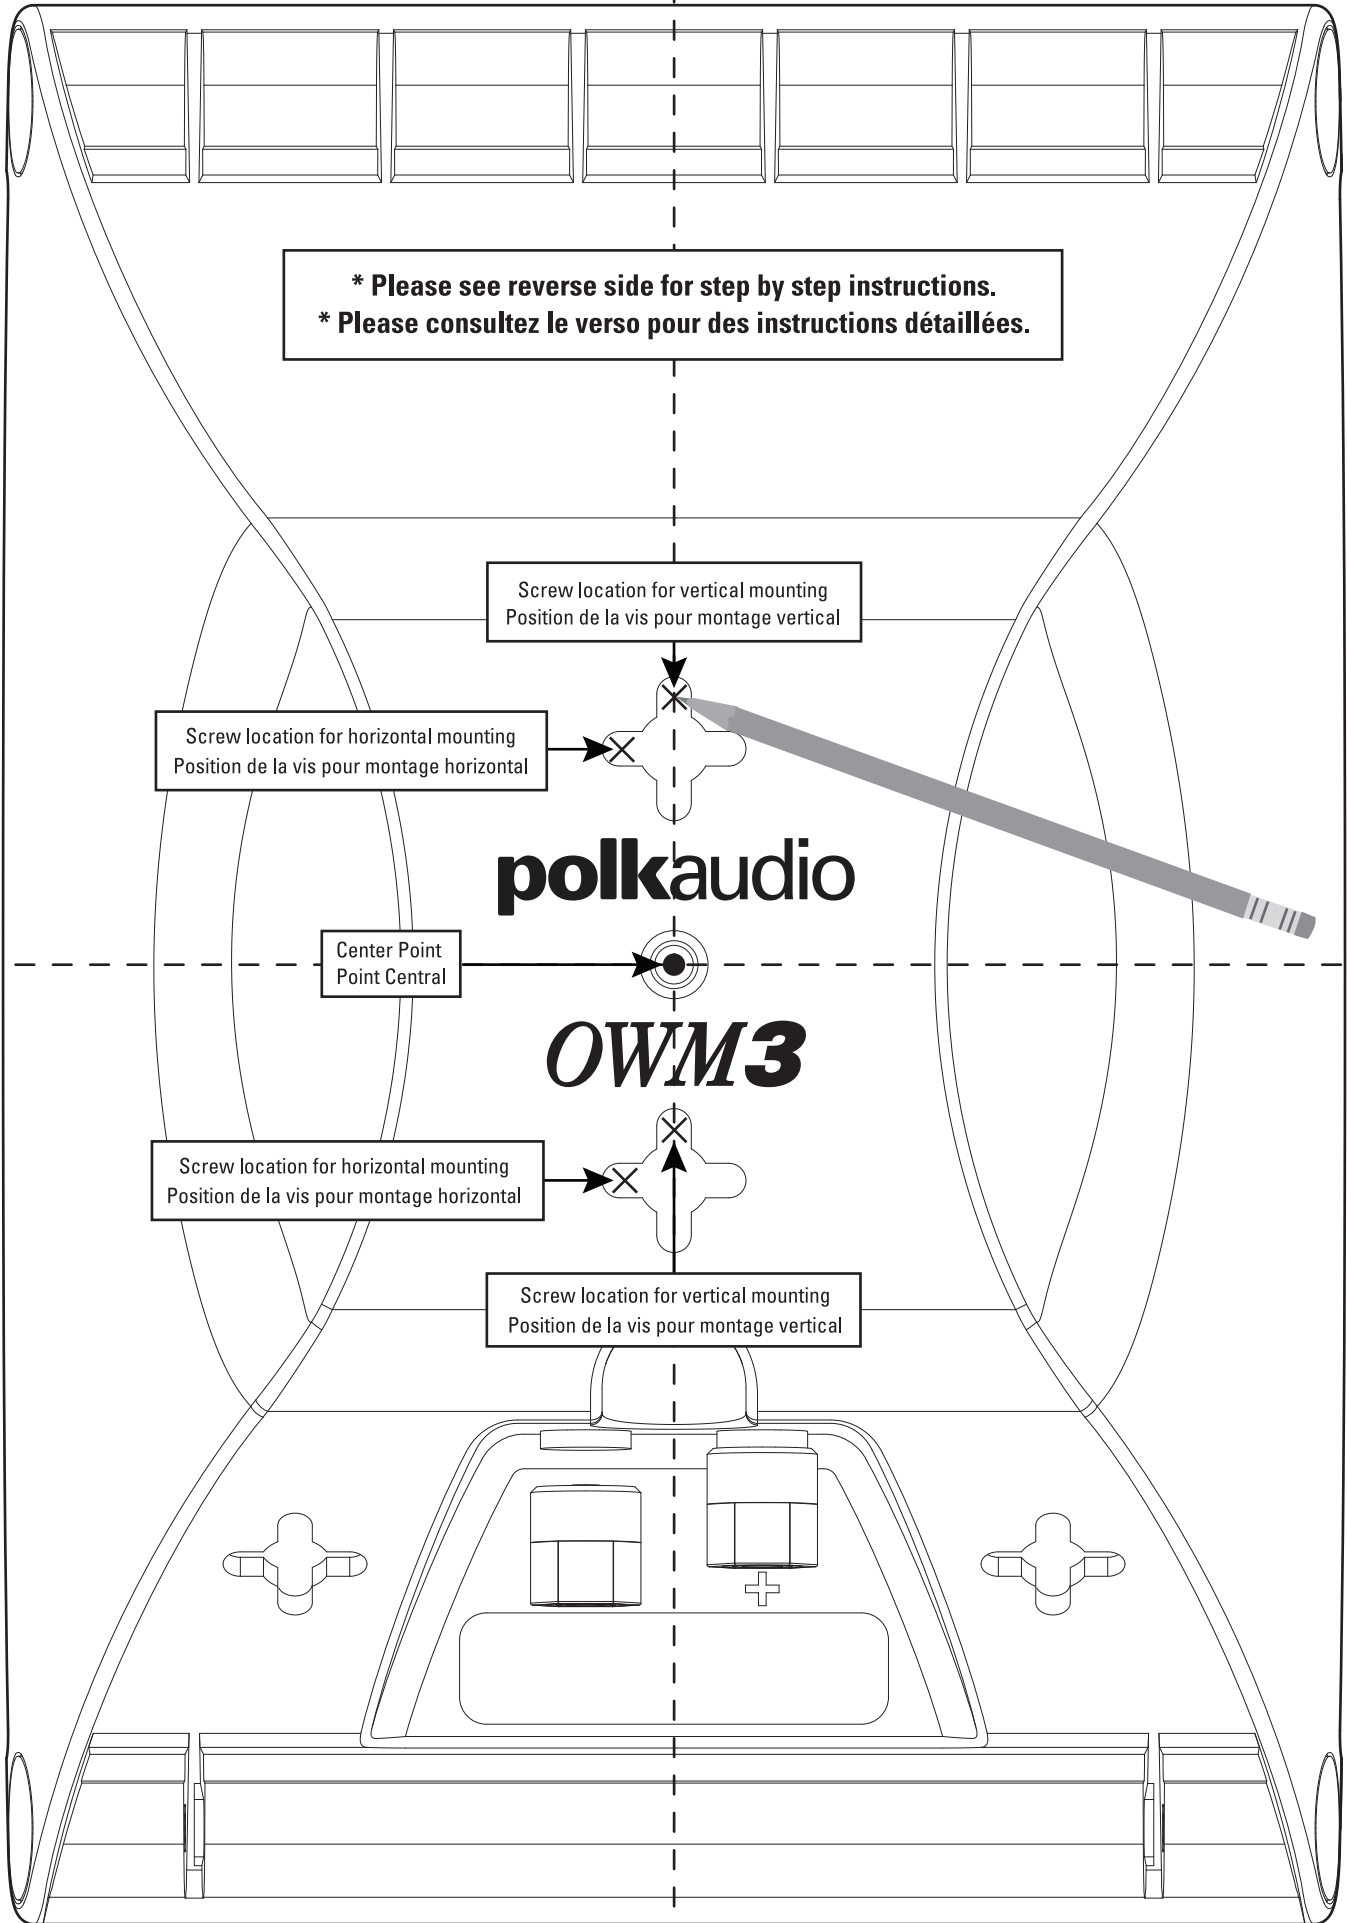

OWM3 Wall Mount Template

1. Determine speaker location.
2. Hold or tape the template to the mounting location, either in a vertical or horizontal position.
3. Mark the holes for the keyhole mounting screws
4. Attach the mounting screws into the wall stud or, if directly into drywall, by using wall anchors. Leave enough of the screw exposed so that the keyhole slots will rest securely on the screws.
5. Attach the speaker wires to the terminals on the back of the speaker. Use red for the positive (+) wire and black for the negative (-) wire.
6. Mount the speaker on the wall.

See manual for different mounting options

Gabarit pour montage mural de la OWM3

1. Déterminez le lieu de montage de l'enceinte.
2. Tenez ou fixez le gabarit à l'endroit choisi—en position verticale ou horizontale.
3. Marquez les trous pour les vis de montage des supports en trou de serrure.
4. Visez les vis de montage au montant du mur—utilisez des ancrés si vous visez dans le placoplâtre. Laissez dépasser les vis assez pour que les supports en trou de serrure s'enclenchent solidement sur les vis.
5. Connectez les fils de h.p. aux bornes situées à l'arrière de l'enceinte. Fil rouge (+) à la borne rouge et fil noir (-) à la borne noire.
6. Montez l'enceinte au mur.

Consultez le manuel pour diverses options de montage.

